



Carry-on Folding Piano 88 Owner's Manual

[Home](#) » [Carry-on](#) » Carry-on Folding Piano 88 Owner's Manual

Carry-on Folding Piano 88 Owner's Manual



Contents [[hide](#)]

- [1 Introduction](#)
- [2 Unfolding and folding instructions](#)
- [3 Front panel buttons](#)
 - [3.1 Rear panel](#)
- [4 Instructions](#)
- [5 Charging instructions](#)
- [6 WARNING](#)
- [7 Precautions](#)
- [8 Specifications](#)
- [9 What's in the box](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)

Introduction

Congratulations on buying this Carry-on Folding Piano 88.


Your Folding Piano 88 is compact, portable and unfolds into a full-length 88-note piano allowing you the freedom to play anywhere.

The folding piano is easy to use and is an ideal tool for beginners, music educators and travelling musicians. In order to utilise the many functions of the Folding Piano, please read this manual carefully before use and keep it safe for future reference.

Unfolding and folding instructions


How to unfold your Carry-on Folding Piano 88:

Important: Lay the piano on a flat surface before unfolding. To prevent damage, Do not unfold the Piano on an uneven surface.

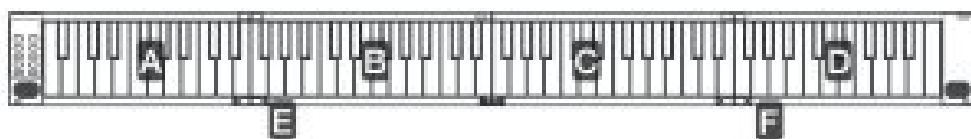


• STEP 1:

Place the Folding Piano to the left of your flat playing surface, with the keys facing towards you and the wiring connector on the right side.

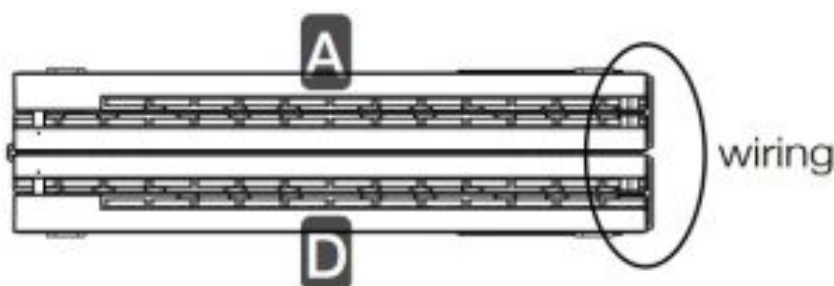

• STEP 2:

Lift up parts C and D together, then lift up part B, move them towards the right and lay them flat as shown below.

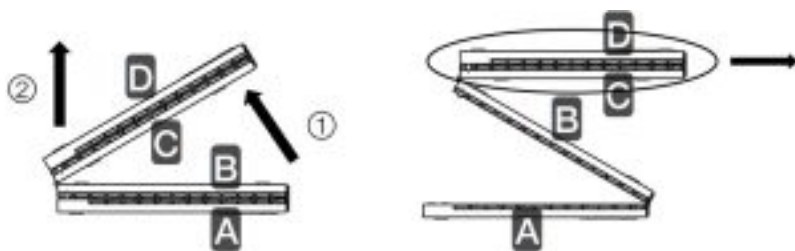

• STEP 3:

Lift up the remaining section (part D), unfold it to the right and lay flat.



• STEP 4:

After unfolding all sections of the piano, to secure the folding piano fully, you will need to lock the hinges down in place. Locate the two small white switches on each side of the hinge. Pull both switches outwards at the same time, push the hinge down into place and release the switches.

How to fold your Carry-on Folding Piano 88

• STEP 1:

Before folding the piano, pull the locks on both sides of the hinge outwards at the same time to release it (as pictured below). Repeat for each hinge.




• STEP 2:

Extend the two small fold-out supports located between sections B and C. Lift part D and fold on top of part C as shown.







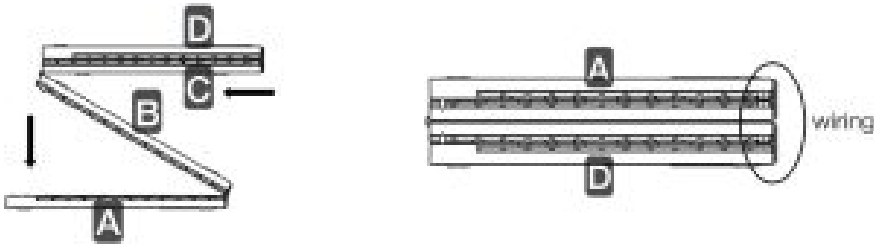


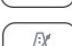
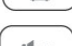
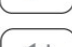
• STEP 3:

Lift up parts C and D and fold over to part A. Your piano is now safely folded for transport or storage.



 
Front panel buttons



-  Previous select button
-  Next select button
-  Voice select button
-  Transpose setting button
-  Accompaniment select button
-  Demo select button
-  Tempo button
-  Metronome select button
-  Volume decrease button
-  Volume increase button



Rear panel

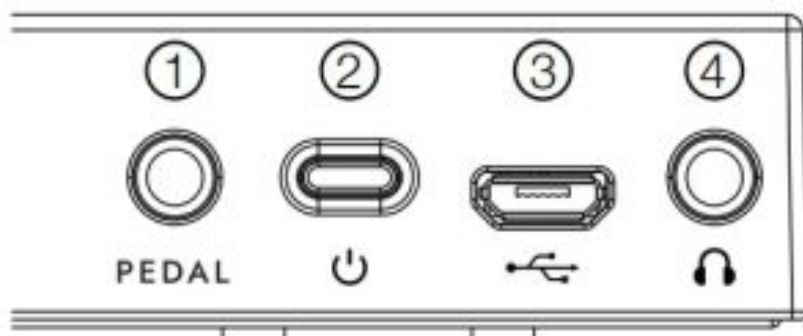1. Sustain pedal socket: Used for connecting the supplied sustain pedal.
2. Power switch: Turn the Piano On/Off.
3. Micro USB port: Connect the supplied USB charging cable to power and charge the device.
Connect to a USB port on your computer to use as a MIDI controller.
4. Headphone: Connect headphones or a speaker with a quality screened cable (not supplied).



Instructions

1. Power On/Off

Press [] button for 0.5s to turn on the power, long press [] button to turn off the power.

2. Voice selection

Press the **VOICE** button to enter the Voice selection menu.

Use the arrow buttons (1 and 2) to select the voice (see Voice table at end of Manual).

3. Transpose

Press the **TRANSP.** button to enter the transposition menu.

Use the arrow buttons (1 and 2) to transpose up or down. Range: -6, +6 semitones.

4. Play Accompaniment (automatic accompaniment)

Press the **ACCOMP.** button to play the current selected rhythm. Use the arrow buttons (1 and 2) to select the rhythm, then press any piano key from A0 to F#2 to play the automatic accompaniment. Press the **ACCOMP.** button again to stop the rhythm playing. Range: 1-128.

5. Adjust the tempo of Accompaniment (automatic accompaniment) and Metronome

Press the **TEMPO** button to enter the tempo adjustment menu.

Use the arrow buttons (1 and 2) to adjust the tempo of the automatic accompaniment and demo songs. Range: 1-16 (30-180 BPM).

6. Play demo song

Press the DEMO button to play the current selected demo song. Use the arrow buttons (1 and 2) to select the demo song. Press the **DEMO** button again to stop the demo song playing. Range: 1-30.

7. Metronome

Press the **METRONOME** button to turn on the metronome. Use the arrow buttons (1 and 2) to adjust the accent of the Metronome. Press the **METRONOME** button again to turn off the metronome.

1	No accent
2	2/4
3	3/4
4	4/4
5	5/4
6	6/4

8. Adjust volume

Press the **VOLUME DOWN** button to turn down the volume. Press the **VOLUME UP** button to turn up the volume. Range: 0-10.

Charging instructions

- The Carry-on Folding Piano 88's built-in rechargeable lithium battery can provide up to 8 hours of normal performance when fully charged.
- The Carry-on Folding Piano 88 is powered and charged via the Micro USB port and a suitable 5V connected power supply.
- When the battery power is low, the screen will blink once per second, and will then turn off after 3 minutes (unless a power supply is connected).
- Continual use of the Carry-on Folding Piano 88 while the battery power is low may impair its performance and can decrease the life span of the battery. Please connect and charge the piano with a suitable power supply immediately.
- While the Carry-on Folding Piano 88 is charging, three flashing indicators will appear at the bottom of the

screen. The three indicators will stop flashing once the piano is fully charged.

- To save power, the Carry-on Folding Piano 88 will automatically turn off after 30 minutes of no operation.
- Unplug the charging cable when the Carry-on Folding Piano 88 will not be used for a long period of time or during a thunderstorm.

WARNING

- In order to avoid electric shock, short circuit, accidents, fire, or other hazards, please pay attention to the following important information:
- Please do not open the Carry-on Folding Piano 88, disassemble its parts or make any changes to the internal components. This product has no parts that can be repaired or altered by users themselves (the Carry-on Folding Piano 88 has its own tuning stability system, which never needs tuning).
- If you notice abnormal behaviour in your Carry-on Folding Piano 88's functions, please contact an official service centre.
- Please keep your Carry-on Folding Piano 88 away from rain, water, or any other wet environment.
- Do not place containers of liquids on top of your Carry-on Folding Piano 88 as accidental spillage may cause damage.
- If the charging cable or plug is worn or damaged, if there is a sudden power failure during use, or if there is an abnormal smell or smoke from your Carry-on Folding Piano 88, you should turn off the power and unplug the charging cable immediately.
- Before cleaning your Carry-on Folding Piano 88, turn off the power and unplug it. Do not clean your Carry-on Folding Piano 88 with a corrosive solvent.
- Ensure that the internal battery pack is not exposed to excessive heat.
- Keep away from fire, hot surfaces, direct sunlight or other ignition sources.

Precautions

The following, but not limited to, precautions should always be observed at all times to avoid possible injury to the user or others, as well as possible damage to the Carry-on Folding Piano 88 or other external equipment:

1. Do not over bend the charging cable, do not place heavy objects on the charging cable, do not place the charging cable in a place where people can pass, and do not wrap the charging cable around other objects to avoid damaging the charging cable.
2. When unplugging the charging cable, hold the plug itself instead of pulling the wire.
3. The charging cable should be removed when the Carry-on Folding Piano 88 is not in use for a long time, or during thunder storms.
4. Do not place the Carry-on Folding Piano 88 in dusty, vibrating, cold or hot conditions (such as direct sunlight or transportation in the sun) to avoid damage to the appearance and internal components of the Carry-on Folding Piano 88.
5. Before moving the Carry-on Folding Piano 88, unplug the charging cable and all cables from it to other equipment.
6. When cleaning the Carry-on Folding Piano 88, wipe it with a soft and dry fabric. Do not use a cloth soaked in paint thinners, organic solvents, cleaning agents, or other corrosive chemicals to wipe the Carry-on Folding Piano 88, to avoid fading the panel or keyboard.

7. When turning on the instrument, first set the volume to the minimum and then gradually increase the volume until it is suitable.
8. Do not place the Carry-on Folding Piano 88 near other electrical appliances, such as a TV, radio, etc. Placing the piano near other electrical appliances may cause mutual interference between them.
9. Do not put the Carry-on Folding Piano 88 on an unstable surface, so as not to cause damage.
10. Do not place heavy objects on the Carry-on Folding Piano 88 or use excessive force to press keys or toggle control switches.
11. If you use an unreasonably high volume for a long time, it may cause hearing damage or damage to the speakers.
12. Avoid strong collisions and shaking of the Carry-on Folding Piano 88, as they may cause damage to the Carry-on Folding Piano 88 and cause personal injury.
13. Avoid use in areas where the piano is uneven, to avoid damage.
14. Before using a charger to power this product, check the charge care full for breakage, tearing, stripped wires, and any other damage.
15. Children under 3 years old should not use this product.

Specifications

- **Keyboard:** 88 note standard keyboard
- **Voice:** 128
- **Accompaniments:** 128
- **Transpose:** -6, +6 semitones
- **Demo songs:** 30
- **Tempo adjustment:** 1-16
- **Metronome:** 1-6
- **Volume adjustment:** 0-10
- **Display:** digital display
- **Speakers:** 2 x 2W (stereo)
- **Power:** Built-in rechargeable battery (1000 mAh) can provide up to 8 hours of normal use when fully charged
- **Connections:** Micro USB, 3.5mm headphone output, sustain pedal input
- **Dimensions:** 331mm x 126mm x 85mm (Folded), 1324mm x 126mm x 21mm (Expanded)
- **Net weight:** 1.6kg

What's in the box

- Carry-on Folding Piano 88
- Owner's Manual
- Micro USB charging cable
- Sustain pedal
- Carry bag

Documents / Resources



[Carry-on Folding Piano 88](#) [pdf] Owner's Manual
Carry-on, Folding, Piano, 88

References

- carryonpiano.com